

- 1x Camping tent
- 1x Boy
- 1x Girl
- 2x Sleeping bag and pillow
- 1x Backpack
- 1x Camera
- 1x Frying pan
- 1x Fire



SCAN FOR
INSTRUCTIONS

CAMPING PANEL

06803.001
148 cm x 100 cm





CAMPING TENT PANEL

Fine Poplin
06803.001



Instructions

Required materials

- 1 DIY panel, article 06803 from POPPY FABRICS
- Sewing machine and stitching thread
- Fiberfill 200grms 13 cm x 87 cm
- Vlieseline H200 Fusible interfacing
- Vlieseline Style-Vil, 80 x 29 cm / plastic sheets
- Toy stuffing or similar filling
- Needle and thread
- Velcro, 56 cm x 1.5 cm
- Thin ribbon for the camera, 0,4 cm x 17 cm
- Snap for the backpack, 1 set Ø 1 cm

Pattern pieces

1. Camping tent 1x
2. Boy 1x
3. Girl 1x
4. Sleeping bag with pillow 2x
5. Backpack 1x
6. Camera 1x
7. Frying pan 1x
8. Fire 1x

Instructions:


- First, cut out all the parts along the dotted line. The seam allowance of 1cm is included.

Iron fusible interfacing on the following parts:

- Backside of the top and bottom of the frying pan
- Backside of the camera
- Backside of the backpack
- Backside of the fire

Make the following bias tapes:

1. Strap for the curtain
2. Straps for the backpack

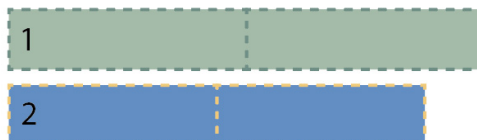

- Fold both long sides to the middle and iron. Fold and pin together and sew the bias tapes.
- Cut bias tape 2 in half along the dotted line.

Cut to size

Fiberfill:

- 2x fiberfill for the sleeping bag.
You can use one piece of the sleeping bag as cutting example to cut the following parts:



Velcro

- 2 x 1,5 cm, to keep the tent open
- 1 x 24,5 cm, for closing the side of the tent
- 1 x 27,5 cm, for the bottom of the tent




Camping tent

Curtain:


1. Fold the curtain in half widthwise, right sides facing each other, sew together leaving an opening for turning.
2. Turn the curtain right side out and close the opening by hand.
3. Pin the middle of the strap to the tent pattern 0,5 cm above the window, sew together.
4. Pin the top of the curtain over the tent strap. Sew down only the top edge so the curtain can open and close.

Camping tent:


5. Sew the velcro in the correct place on the tent panel, following the yellow marking below.

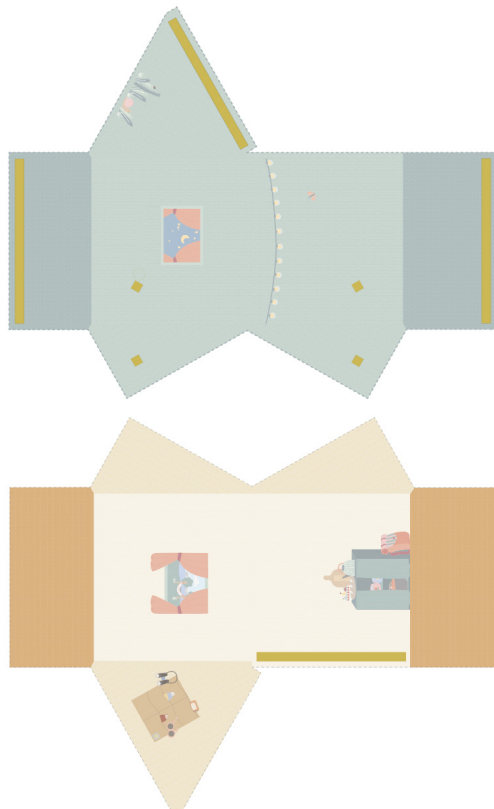

6. Pin the outside and inside of the tent with the right sides facing each other. Stitch around, leaving an opening at the bottom of the tent. Turn the tent right side out.
7. Topstitch the following parts, following the yellow marking below. Insert the Style-Vil / Plastic sheets between the two layers of the tent, close the opening by hand.

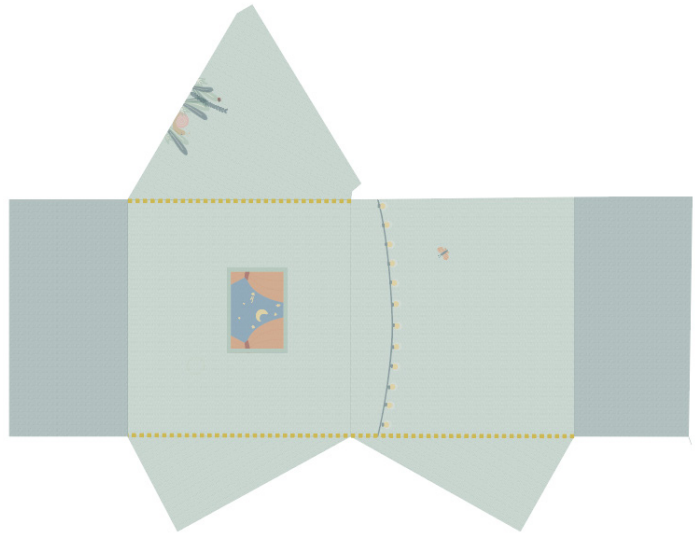

8. Top stitch to secure the Style-Vil / Plastic sheets, following the yellow marking below.

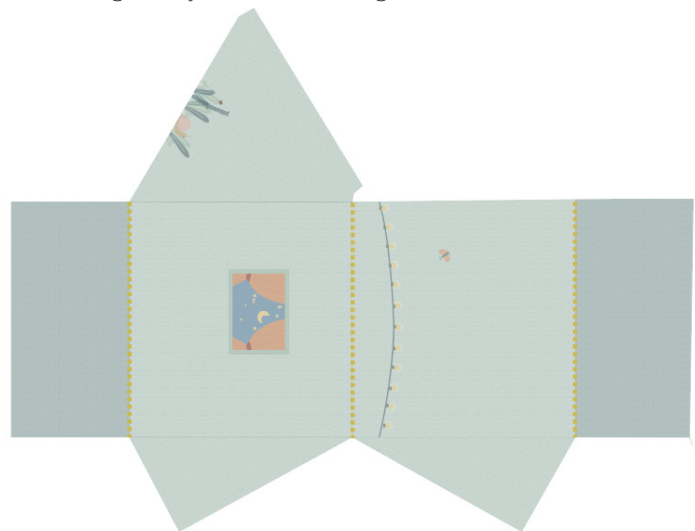

Boy and girl


9. Place the bodies with the right sides together, stitch together and leave the bottom open for the toy stuffing. Turn the bodies right side out, fill with toy stuffing.
10. Place the legs with the right sides together, stitch together and leave the top open for the toy stuffing. Turn the legs right side out, fill the legs with toy stuffing, leaving the top 2 cm unfilled. Topstitch the legs separately 2 cm from the top to secure the filling.
11. Fold the seam from the bodies inward, insert the legs, pin in place and close the opening by hand.
12. Place the arms with the right sides together, stitch together and leave 2 cm on the side of the arm open for the toy stuffing. Turn the arms right side out, fill with toy stuffing and close the opening by hand.
13. Attach the arms to the bodies by hand.

Backpack

14. Fold the fabric in half, with the right sides facing each other. Pin the straps in between the sides, see the image below where to place the straps, stitch around leaving an opening to turn.



15. Turn the backpack right side out, and close the opening by hand.
16. Fold the bottom of the backpack upward to where the stripes begin. Pin in place and topstitch following the yellow marking below.

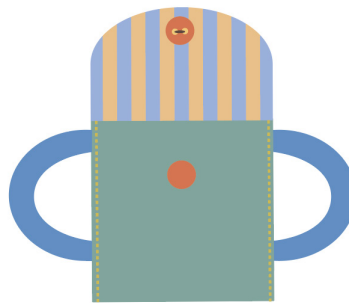

17. Mark the snap positions and attach the snaps.

Camera:

18. Fold the fabric in half widthwise, right sides facing each other. Pin the ribbon for the camera in between the top edge and stitch around, leaving an opening to turn.
19. Turn the camera right side out, fill with toy stuffing and close the opening by hand.

Sleeping bag with pillow

Sleeping bag:

20. Pin the sleeping bag with the right sides facing each other, pin the fiberfill on top, sew together leaving an opening for turning.
21. Turn the sleeping bag right side out, and close the opening by hand.
22. Fold the bottom of the sleeping bag upward to where the stripes begin. Pin in place and top stitch the sides closed 0,5cm from both edges.

Pillows:

23. Fold the pillows in half lengthways with the right sides facing each other, sew together leaving an opening for the toy stuffing.
24. Turn the pillows right side out, fill with toy stuffing and close the opening by hand.

Frying pan:

25. Topstitch the egg yoke and egg outlines.
26. Pin the frying pan with the right sides together, stitch around, leaving an opening to turn.
27. Turn the frying pan right side out and close the opening by hand.
28. Topstitch the grey circle in the pan.

Fire:



29. Pin corner 2 onto corner 1 right sides together, pin and sew along the edge.
30. Fold corner 3 towards corner 1 right sides together, pin and sew along the edge.
31. Sew 2,5 cm from both corners to create an opening for turning and the toy stuffing.
32. Trim the edges to achieve clean corners.
33. Turn the fire right side out, fill with toy stuffing and close the opening by hand.